


TORP THUMB THROTTLE FOR REGENERATIVE BRAKING

INSTALLATION

First, remove the protective cap from the connector by pressing firmly to its side and pulling it out of the connector.

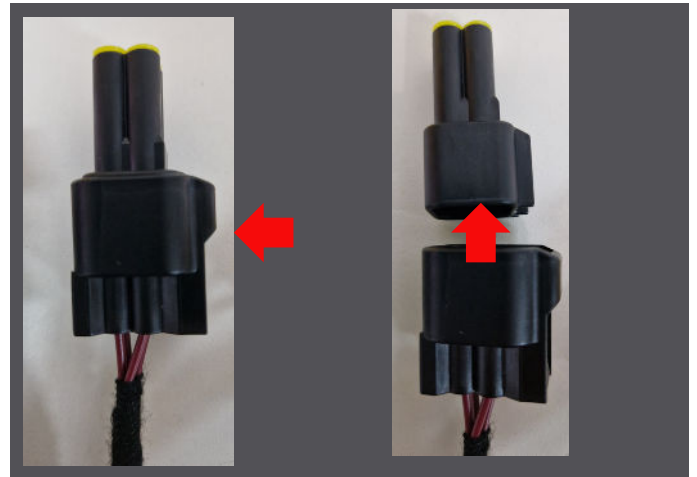

The thumb throttle is being installed directly to the controller's wiring harness, as shown on the photo.

Please note that the wiring loom has to have 5 connectors, otherwise, you can purchase a new generation wiring on the Torp web shop, [here](#).

After the installation, go to the 4th screen in the Torp app - see Peripherals, and increase the amperes for the Thumb regen.